



THE CUSTOMER IS RESPONSIBLE FOR THE INSTALLATION AND MAINTENANCE OF THE FOLLOWING:
 WEATHERHEAD AND GALVANIZED STEEL RISER
 SERVICE ENTRANCE CONDUCTOR
 SERVICE PANEL
 SERVICE PANEL GROUNDING
 MAINTAINING TREE CLEARANCE AROUND OVERHEAD ELECTRIC LINES TO YOUR RESIDENCE

CITY OF BANNING ELECTRIC UTILITY IS RESPONSIBLE FOR THE INSTALLATION AND MAINTENANCE OF THE FOLLOWING:
 OVERHEAD ELECTRIC LINES TO YOUR RESIDENCE
 ELECTRIC METER

SERVICE ENTRANCE CONDUCTOR SIZING:

100A SERVICE: #4-STRANDED COPPER NEUTRAL AND SERVICE ENTRANCE CONDUCTORS WITH #8 SOLID COPPER GROUND/BONDING

125A SERVICE: #2-STRANDED COPPER NEUTRAL AND SERVICE ENTRANCE CONDUCTORS WITH #8 SOLID COPPER GROUND/BOND

200A SERVICE: #2/0 COPPER STRANDED NEUTRAL AND SERVICE ENTRANCE CONDUCTORS WITH #4 SOLID COPPER GROUND/BOND

*NEUTRAL WIRE MUST BE MARKED WHITE AT BOTH WEATHERHEAD & PANEL

CALL 811 UNDERGROUND SERVICE ALERT 48 HOURS BEFORE YOU DIG OR INSTALL GROUND ROD(S)



REVISED: 08/19/2019

APPROVED: *[Signature]*

STANDARD DRAWINGS

TYPICAL OVERHEAD SERVICE

SD

600-10